

ISTRUZIONI PER L'USO

INSTRUCTION FOR USE

Radiocomando universale a frequenza fissa a 433.92 Mhz 4 Ch
Universal radio remote control 4 channel FIXfrequency 433 Mhz

PROGRAMMAZIONE

Passo 1: cancellazione della memoria

1. Premere il tasto A e B simultaneamente finché il LED lampeggia 3 volte
2. Rilasciare il tasto B (mantenendo A premuto) e premere lentamente il tasto B 3 volte: il LED lampeggia
3. Rilasciare il tasto A. La cancellazione è stata effettuata.

Passo 2: copia del codice dal telecomando originale

1. Posizionare il telecomando il più vicino possibile al telecomando originale
2. Premere e tenere premuto il tasto che si vuole copiare sul telecomando originale, quindi premere e tenere premuto il tasto del MK-RC-N8GB sul quale si vuole memorizzare il codice da copiare finché il LED non lampeggia due volte, seguito da un lampeggio veloce e continuo, ad indicare che la copia è avvenuta con successo.
3. Rilasciare entrambi i pulsanti, la copia è terminata.
Copiare i rimanenti tasti con la stessa procedura

Passo 3: recupero del codice

(Da utilizzare solo se inavvertitamente viene cancellato il codice copiato)

Premere e tenere premuti i tasti C e D per 2 secondi: il LED lampeggerà, ad indicare che tutti i pulsanti sono ritornati all'ultimo codice che era stato copiato.

PROGRAMMING

Step 1: Clear the history code from duplicator

1. Press button A and B continuously until LED flash 3 times
2. Release button B (Keep pressing button A), and press button B Slowly for 3 times, LED flash
3. Release button "A", finish code clearance.

Step 2: Copy code from original transmitter


1. Put duplicator aside of original transmitter, as close as possible.
2. Press and hold the key you want to copy on the original remote control, then press and hold the MK-RC-N8GB key on which you want to store the code to copy until the LED flashes twice, followed by a quick flash and continuous, indicating that the copy was successful.
3. Release both buttons, finish code copy, copy other button in same way.

Step 3: recovery the code


(Only to be used if it is inadvertently deleted the code that you copied)

Press and hold button C & D for 2 seconds, then LED will flash, which indicates all button return back to the latest copy codes.

1

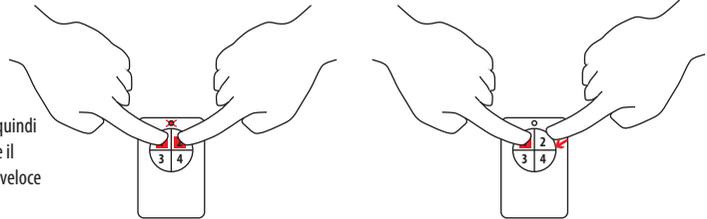

2

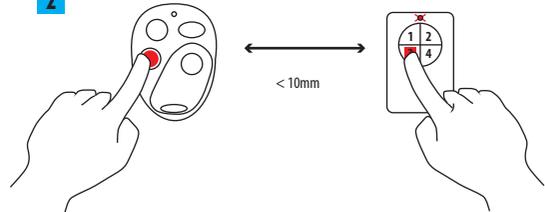

3

